Night light with remote control



EN - USER MANUAL

Keep the manufacturer's information for future reference.

- Product Details:
Capacity of the lithium battery：1200mAh
Working voltage/current：DC 5V 500 mA
Maximum Power：0.5W

- Features:
1. Choose between 3 different modes and 9 vibrant colors.
2. Eco friendly and high quality non-toxic soft washable silicone + ABS material safe for babies and toddlers. No sharp parts and can be put into bed.
3. No need to replace batteries and doesn't get hot. USB charge point.
4. Silicone part can be detached and is machine washable.

- Instructions:
1. Charge the night lamp fully for first time use. The light indicator light will stay red while charging.
2. Press the main power button to turn on lamp to white light mode.
3. Tap the silicone surface to switch between colors and modes.

- Tap Functions:
Push the power button to start the lamp in white mode. First tap will switch lamp to bright white light. Second tap will start slow-changing colors. Third tap will speed up the color changes. Fourth tap will pause the lamp on a color. Continue tapping the lamp to restart the cycle.

DE - GEBRAUCHSANWEISUNG

Bewahren Sie die Herstellerinformationen zum späteren Nachschlagen auf.

- Technische Eigenschaften
Lithium Batterie: 1200mAh
Funktionsspannung/-strom: DC 5V 500 mA
Max. Stärke: 0,5W

- Eigenschaften:
1. Sie können zwischen drei verschiedenen Funktionsmodus und 9 unterschiedlichen Farben wählen.
2. Das Produkt wurde aus umweltfreundlichen, ungiftigen, waschbaren ABS Silikonmaterial hergestellt. Das Nachtlicht hat eine runde Form und hat keine scharfen Kanten. Sie können es auch ins Bettchen legen.
3. Es enthält einen Lade-Akku, der sich nicht erwärmt. Laden Sie ihn mit Hilfe des USB-Ladekabels auf.
4. Der Silikonteil kann maschinell gewaschen werden.

- Gebrauchsanweisung:
1. Vor der ersten Verwendung laden Sie den Akku vollkommen auf. Während des Aufladens wird ein rotes Indikationslicht leuchten.

FreeON

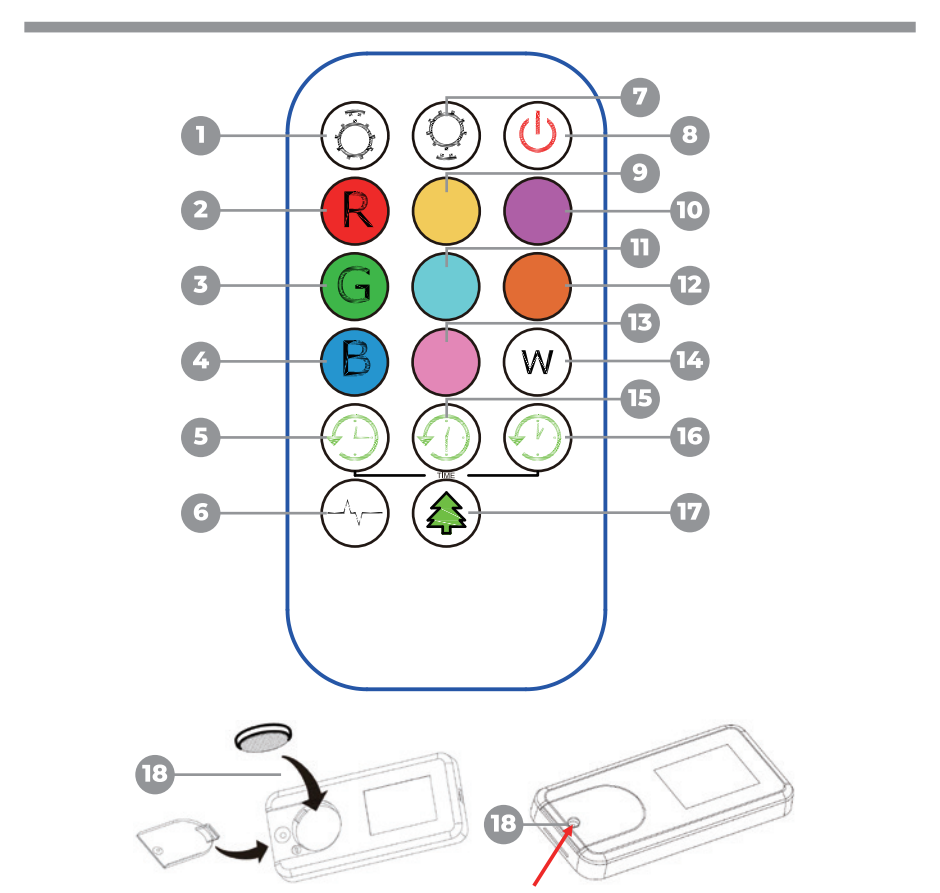

EN
1. Brightness up
2. Red
3. Green
4. Blue
5. 15 mins timer
6. Flickering mode
7. Brightness down
8. ON/OFF
9. Yellow
10. Purple
11. Light Blue
12. Orange
13. Pink
14. White
15. 30 mins timer
16. 60 mins timer
17. Light colors slowly changing
18. The positive pole facing up
19. Make sure the screw is properly tightened

The remote control works with a button battery CR 2025 (battery included). The included battery is for demonstration purposes in the store. We recommend that you change the battery when purchasing.

DE
1. Lichtverstärkung (Beleuchtung)
2. Rot
3. Grün
4. Blau
5. 15-Minuten Timer
6. Blink-Modus
7. Lichtreduzierung
8. EIN / AUS
9. Gelb
10. Violett
11. Hellblau
12. Orange
13. Rosa
14. Weiß
15. 30-Minuten Timer
16. 60-Minuten Timer
17. Langsamer Farbwechsel
18. Der positive Pol nach oben
19. Überzeugen Sie sich, dass die Schraube richtig festgeschraubt ist

Die Fernbedienung funktioniert mit Hilfe einer Knopfbatterie CR 2025 (Batterie inklusive). Die beigefügte Batterie ist zur Demonstration im Laden gedacht. Beim Kauf empfehlen wir, dass Sie die Batterie wechseln.

IT
1. Aumenta la luminosità (retroilluminazione)
2. Colore rosso
3. Colore verde
4. Colore blu
5. Timer di 15 minuti
6. Modalità lampeggiante
7. Riduzione della luminosità
8. ON/OFF
9. Colore giallo
10. Colore viola
11. Colore azzurro
12. Colore arancione
13. Colore rosa
14. Colore bianco
15. Timer da 30 minuti
16. Timer da 60 minuti
17. Cambio lento dei colori
18. polo positivo su
19. Assicurarsi che la vite sia correttamente serrata

Il telecomando è alimentato da una batteria a bottone CR 2025 (batteria inclusa). La batteria inclusa è per uso dimostrativo in negozio. Si consiglia di sostituirla con una nuova batteria al momento dell'acquisto.

FR
1. Augmentation de la luminosité (éclairage)
2. Couleur rouge
3. Couleur verte
4. Couleur bleue
5. Minuterie de 15 minutes
6. Mode clignotant
7. Diminution de la luminosité
8. MARCHE/ARRÊT
9. Couleur jaune
10. Couleur violette
11. Couleur bleu clair
12. Couleur orange
13. Couleur rose
14. Couleur blanche
15. Minuterie de 30 minutes
16. Minuterie de 60 minutes
17. Changement lent des couleurs
18. Pôle positif vers le haut
19. Assurez-vous que la vis est correctement fixée

La télécommande est alimentée par une pile bouton CR 2025 (pile incluse). La pile incluse est destinée à la démonstration en magasin. Nous vous recommandons de la remplacer par une nouvelle pile lors de votre achat.

ES
1. Aumento de la luminosidad (iluminación)
2. Color rojo
3. Color verde
4. Color azul
5. Temporizador de 15 minutos
6. Modo parpadeo
7. Reducción de la luminosidad
8. ENCENDIDO / APAGADO
9. Color amarillo
10. Color violeta
11. Color azul claro
12. Color naranja
13. Color rosa
14. Color blanco
15. Temporizador de 30 minutos
16. Temporizador de 60 minutos
17. Cambio de color lento
18. Polo positivo hacia arriba
19. Asegúrese de que el tornillo esté apretado de forma correcta

El mando a distancia funciona con una pila de botón CR 2025 (pila adjunta). La pila adjunta está destinada a su uso demostrativo en el punto de venta. Recomendamos cambiarla por una pila nueva al realizar su compra.

SI
1. Povečanje svetlosti (osvetlitev)
2. Rdeča barva
3. Zelena barva
4. Modra barva
5. 15-minutni časovnik
6. Utripajoči način
7. Zmanjšanje svetlosti
8. VKLOP / IZKLOP
9. Rumena barva
10. Vijolična barva
11. Svetlo modra barva
12. Oranžna barva
13. Roza barva
14. Bela barva
15. 30- minutni časovnik
16. 60-minutni časovnik
17. Počasno spreminjanje barv
18. Pozitivni pol navzgor
19. Prepričajte se, da bo vijak pravilno pričvrščen

Daljinski upravljavec deluje s pomočjo ene CR 2025 gumbne baterije (baterija priložena). Priložena baterija je namenjena demonstrativni uporabi v prodajalni. Ob nakupu priporočamo zamenjavo z novo baterijo.

EN - WARNINGS!

Not suitable for children under 3 years of age. Small parts. Danger of suffocation due to foreign objects. Keep the USB charging cable out of the reach of children under 3 years of age. There is a risk of electric shock if the charging cable is used incorrectly. The charging cable is not suitable for children under 3 years of age. Always use only the charging cable provided. The product contains a rechargeable battery. The battery may only be charged by an adult. Regularly check the condition of the charging cable, charging socket and other components and if there is any damage, stop using the product until the damage has been repaired. Before charging, always check the condition of the charging unit cable (possible damage). The charging cable is not a toy. Remove the charging cable after charging. Do not modify or repair the product under any circumstances. This could cause damage; there is a risk of battery overheating, short circuiting or ignition. Keep away from fire, sunlight, high temperatures and/or moisture. Do not use the product if it is overheating, the battery is leaking, emits an unpleasant smell or if there are any other problems. Do not store in a confined space. There should always be at least 5 mm of space in the storage area to allow air to circulate. At the first signs of damage or wear, discard the product. Do not expose to moisture.

Cleaning: Before charging, unplug the product from the power supply. Clean the product with a dust cloth or a damp cloth. Do not clean the circuit with a damp cloth.

Storage: Store in a dry room. There should always be at least 5 mm of space in the storage area to allow air to circulate.

WARNING! INGESTION HAZARD!

WARNING! Keep batteries out of the reach of children. **WARNING!** The product contains button batteries - risk of suffocation if ingested. Ingestion of batteries can cause serious injury or even death within a very short time (approximately within 2 hours of ingestion) as a result of chemical burns or perforation of the esophagus. If ingestion is suspected, take the child to a doctor as soon as possible. Dispose of used button batteries properly and out of the reach of children. Batteries can always be dangerous, even when they are empty.

For best performance:
General battery information: Use only the recommended type of batteries. Do not mix different types of batteries. Do not mix old and new batteries. Remove the batteries from the product when not in use. Remove used batteries from the product and dispose of them properly. Do not charge non-rechargeable batteries. Before charging, remove the batteries from the product.
The batteries can only be charged by an adult Insert the batteries according to the correct polarization. Be careful not to short-circuit when inserting the batteries.
Save the packaging for future reference.

ALWAYS BE AN ATTENDANCE WHEN INSERTING AND REPLACING BATTERIES.
Remove used batteries from the product.
RECYCLING OF BATTERIES AND OTHER WASTE ELECTRICAL APPLIANCES (WEEE): Be aware of the importance of a clean environment, so never dispose of batteries or other electrical appliances in household waste, but in dedicated bins. Ask where in your environment the collection points are. Each of the products has a printed ingredient to help you decide how to sort. Products containing Pb, Cd and Hg are also not allowed to be disposed of as household waste. Proper and separate disposal of used product will help prevent possible negative consequences for the environment and human health and promote the recycling of the materials from which the product is made. Improper disposal of the product by the user can harm the environment and human health.

Proper disposal of used equipment (Directive 2012/19/EU on waste electrical and electronic equipment (WEEE)) - products marked with this symbol must not be disposed of or thrown away with other household waste

Proper disposal of used batteries in accordance with Directive 203/56/EU on the disposal of batteries - products marked with this symbol must not be disposed of with household waste. Do not dispose of batteries in mixed municipal waste. Battery users should use the available collection network for the items, allowing them to be returned, recycled and disposed of. Within the EU, battery collection and recycling are governed by separate procedures. In case of doubt or questions, please contact your local collection network.

DE - WARNUNGEN!

Nicht für Kinder unter 3 Jahren geeignet. Kleinteile. Erstickungsgefahr wegen des Fremdkörpers. Bewahren Sie das USB-Ladekabel außer Reichweite von Kindern auf, die jünger als 3 Jahre alt sind. Es besteht die Gefahr des elektrischen Schlags, im Fall einer falschen Verwendung des Ladekabels.
Das Ladekabel ist nicht für Kinder unter 3 Jahren geeignet. Verwenden Sie immer nur das beigefügte Ladekabel. Das Produkt enthält eine Auflade-Batterie. Die Batterie darf nur ein Erwachsener aufladen. Überprüfen Sie regelmäßig den Zustand des Ladekabels, der Ladesteckdose und anderer Bestandteile und bei irgendwelchen Beschädigungen benutzen Sie das Produkt nicht mehr, bis die Beschädigungen nicht beseitigt sind.
Vor dem Aufladen überprüfen Sie immer den Zustand der Ladeeinheit – Kabels (mögliche Beschädigungen). Das Ladekabel ist kein Spielzeug. Nach dem Aufladen

[...]

2012/19/ЕУ за отпадна електрична и електронска опрема (WEEE)) - производите означени со овој симбол не смеат да се фрлаат или фрлаат со друг отпад од домаќинството

Правилно отстранување на искористените батерии во согласност со Директивата 2003/56/EU за отстранување на батериите - производите означени со овој симбол не смеат да се фрлаат со отпадот од домаќинството. Не фрлајте ги батериите во мешан комунален отпад. Корисниците на батерии треба да ја користат достапната мрежа за собирање на артиклот, овозможувајќи нивно враќање, рециклирање и отстранување. Во рамките на ЕУ, собирањето и рециклирањето на батериите се регулирани со посебни процедури. Ако се сомневате или не сте сигурни, контактирајте со вашата локална мрежа за собирање.

DC 5V 500 mA

Apollo d. o. o.,
Puhova ulica 18, 2250 Ptuj, SI www.apollo.si
Apollo HR d. o. o.,
Pustodol Začretski 19 a, 49223 Sveti Križ Začretje, HR www.apollo.hr
Аполло МК ДООЕЛ,
ул., Киро Глигоров бр.13, 1000 СКОПЈЕ, МК www.apollomk.mk

Made in China / Hergestellt in China / Prodotto in Cina / Fabriqué en Chine
Fabricada en China / Izdelano na Kitajskem / Zemlja porijekla: Kina / Произведено во Кина

FreeON