说明书折叠尺寸：100*65mm / 6折页 / 正反面印刷

KIDDIGIT

SMART FUN FOR LITTLE MINDS

Bluetooth karaoke set

with 2 Wireless Microphones and Speaker

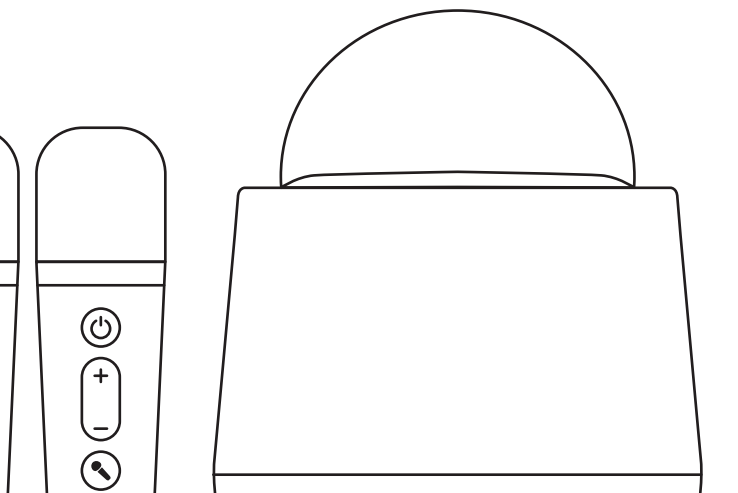

FREE 2 PLAY

by FreeON

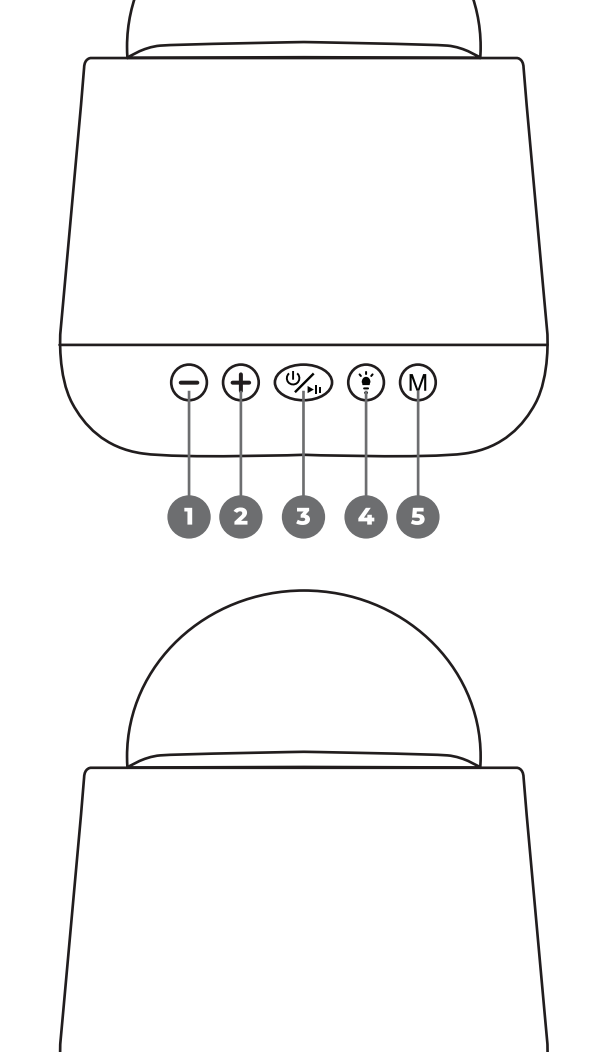

(EN)

1. Minus button: Press and hold: Previous track; Short press: Volume down (-)
2. Plus button: Press and hold: Next track; Short press: Volume up (+)
3. Power button: Press and hold: Turn device on/off; Short press: Play/Pause
4. Light button: Press and hold: Turn light on/off; Short press: Switch light effects
5. Mode button: Short press: Switch audio source (TF/BT/AUX)
6. Indicator light
7. USB-C charging port (DC 5V)
8. Card slot (microSD card not included)
9. Audio playback mode
10. Long Press: power on/off
    Short press: microphone volume off/on
    Double click: play/pause
11. Press and hold: Next track; Short press: Volume up (+)
12. Press and hold: Previous track; Short press: Volume down (-)
13. Long press: magical voice switch
    Short press: original sound off/on
14. Blue indicator light: Power indicator Red indicator light: Charging indicator
15. USB-C port (DC 5V)
16. USB-C charging cable

(DE)

1. Minustaste: Taste gedrückt halten: vorheriger
   Titel Taste kurz drücken: Lautstärke verringern (–)
2. Plustaste: Taste gedrückt halten: nächster Titel
   Taste kurz drücken: Lautstärke erhöhen (+)
3. Ein-/Aus-Taste: Taste gedrückt halten: Gerät ein- / ausschalten
   Taste kurz drücken: Wiedergabe / Pause
4. Lichttaste: Taste gedrückt halten: Licht ein-/ausschalten
   Taste kurz drücken: Lichteffekte wechseln
5. Modustaste: Taste kurz drücken: Audioquelle wechseln (TF/BT/AUX)
6. Kontrollleuchte
7. USB-C-Ladeanschluss (DC 5V)
8. Kartensteckplatz (microSD-Karte nicht im Lieferumfang enthalten)
9. Audio-Wiedergabemodus
10. Langes Drücken: Ein-/Ausschalten; Kurzes Drücken: Mikrofonlautstärke ein-/ausschalten; Doppelklick: Wiedergabe/Pause
11. Taste gedrückt halten: nächster Titel
    Taste kurz drücken: Lautstärke erhöhen (+)
12. Taste gedrückt halten: vorheriger Titel
    Taste kurz drücken: Lautstärke verringern (–)
13. Langes Drücken: Magischer Sprachschalter
    Kurzes Drücken: Originalton ein-/ausschalten
14. Blaue Kontrollleuchte: Betriebsanzeige
    Rote Kontrollleuchte: Ladeanzeige
15. USB-C-Anschluss (DC 5V)
16. USB-C-Ladekabel